

FLIR Boson GUI v1.4.4 QuickStart Guide

Download and install The Boson GUI
Open the Boson App GUI and follow steps below

1. Select Boson COM Port (Device Manager)

2. Enable USB Video

3. Select FLIR Video

4. Averager Mode:
"Enabled" = 30Hz video
"Disabled" = 60Hz video

5. Choose Video output
IR16 (16-bit)- Pre-AGC
UVC (8-bit) Full AGC - Best

6. Capture video or images.

7. Capture Settings: Media Settings (Left Panel)

Advanced & AGC Settings
Please refer to the FLIR Camera Adjustments app note

System Tab contains:
FFC (Flat Field Correction) Settings
Dynamic Range Control – Scene Temperature
Configuration Controls – Save/Reset Settings

If video freezes or the Boson's COM port does up in the port selector, click connection reset (near step 1.) and follow the steps above.

This document does not contain any export-controlled information



The World's Sixth Sense™